
1-1. Hybrid system

Hybrid system (RX450h)

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

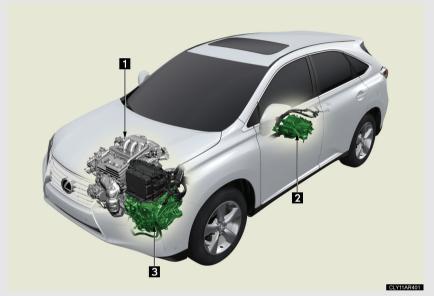

- Gasoline engine
- Rear electric motor (Traction motor)[⋆]
- Front electric motor (Traction motor)
- *: AWD models only

■ When stopped/during start-off

The gasoline engine stops when the vehicle is stopped. During startoff, the electric motor (traction motor) drives the vehicle. At slow speeds or when traveling down a gentle slope, the engine is stopped and the motor is used.

During normal driving

The gasoline engine is predominantly used. The electric motor (traction motor) charges the hybrid battery as necessary.

■ When accelerating sharply

The power of the hybrid battery (traction battery) is added to that of the gasoline engine via the electric motor (traction motor).

■ When braking (regenerative braking)

The electric motor (traction motor) charges the hybrid battery (traction battery).

Vehicle Proximity Notification System

When the gasoline engine is off while driving, a sound is produced to warn pedestrians, people riding bicycles or other people and vehicles in the surrounding area that the vehicle is approaching. The pitch of the sound adjusts according to vehicle speed. When vehicle speed is approximately 12 mph (20 km/h) or more, the warning system turns off.

■ Regenerative braking

In the following situations, kinetic energy is converted to electric energy and deceleration force can be obtained in conjunction with the recharging of the hybrid battery (traction battery).

- The accelerator pedal is released.
- The brake pedal is depressed with the shift lever in D or S.

■ Conditions in which the gasoline engine may not stop

The gasoline engine starts and stops automatically. However, it may not stop automatically in the following conditions:

- During gasoline engine warm-up
- During hybrid battery (traction battery) charging
- When the temperature of the hybrid battery (traction battery) is high or low
- When the heater is switched on

■ Charging the hybrid battery (traction battery)

- As the gasoline engine charges the hybrid battery (traction battery), the battery does not need to be charged from an outside source. However, if the vehicle is left parked for a long time the hybrid battery will slowly discharge. For this reason, be sure to drive the vehicle at least once every few months for at least 30 minutes. If the hybrid battery becomes fully discharged and you are unable to jump-start the vehicle with the 12-volt battery, contact your Lexus dealer.
- If the shift lever is in N, the hybrid battery (traction battery) will not be charged. Always put the shift lever in P when the vehicle is stopped. When driving in heavy traffic, operate the vehicle with the shift lever in D or S to avoid discharging the battery.

■ After the 12-volt battery has discharged or has been changed or removed

The gasoline engine may not stop even if the vehicle is running on the hybrid battery (traction battery). If this continues for a few days, contact your Lexus dealer.

■ Sounds and vibrations specific to a hybrid vehicle

There may be no engine sounds or vibration even though the vehicle is able to move. Always shift the shift lever to P when parked.

The following sounds or vibrations may occur when the hybrid system is operating, and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) under the rear seat when the hybrid system starts or stops.
- Sounds from the hybrid system may be heard when the back door is open.
- Sounds may be heard from the hybrid transmission when the engine is started or stopped, or while the engine is idling.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the brake pedal is depressed and accelerator is loosened.
- Vibration may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vents under the rear seat.

■ Vehicle Proximity Notification System

In the following cases, the Vehicle Proximity Notification System sound may be difficult for pedestrians, people riding bicycles or other people and vehicles in the surrounding area to hear:


- When there is a lot of noise in the vicinity
- When it is raining or during strong winds
- When in the area surrounding the rear of the vehicle, rather than in front of the vehicle

■ Maintenance, repair, recycling, and disposal

Contact your Lexus dealer regarding maintenance, repair, recycling and disposal. Do not dispose of the vehicle yourself.

Hybrid system precautions (RX450h)

Take care when handling the hybrid system, as it contains a high voltage system (about 650V at maximum) as well as parts that become extremely hot when the hybrid system is operating. Obey the caution labels attached to the vehicle.

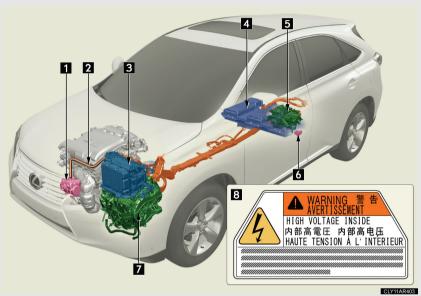

- Air conditioning compressor
- High voltage cables (orange)
- Power control unit with DC/DC converter
- Hybrid battery (traction battery)
 - *: AWD models only

- Rear electric motor (traction motor)*
- 6 Service plug
- ▼ Front electric motor (traction motor)
- Caution label

Hybrid battery air vents



There are air intake vents under the rear seats for the purpose of cooling the hybrid battery (traction battery). If the vents become blocked, the hybrid battery may overheat, leading to a reduction in hybrid battery output.

Emergency shut off system

When a certain level of impact is detected by the impact sensor, the emergency shut off system blocks off the high voltage current and stops the fuel pump to minimize the risk of electrocution and fuel leakage. If the emergency shut off system activates, your vehicle will not restart. To restart the hybrid system, contact your Lexus dealer.

Hybrid warning message

A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.



If a warning message is shown on the multi-information display, read the message and follow the instructions. (→P. 870)

If a warning light comes on or a warning message is displayed, or the 12-volt battery is disconnected

The hybrid system may not start. In that case, try to start the system again. If the "READY" indicator does not come on, contact your Lexus dealer.

■ When refueling, the fuel filler door may take a few moments to open

As part of emission system operation, it may take up to 10 seconds for the fuel filler door to automatically release after the opener switch is pressed. Before refueling is possible, a message will be shown on the multi-information display. $(\rightarrow P. 137, 884)$

■ Electromagnetic waves

- High voltage parts and cables on the hybrid vehicles incorporate electromagnetic shielding, and therefore emit approximately the same amount of electromagnetic waves as conventional gasoline powered vehicles or home electronic appliances.
- Your vehicle may cause sound interference in some third party-produced radio parts.

■ Running out of fuel

When the vehicle has run out of fuel and the hybrid system cannot be started, refuel the vehicle with at least enough gasoline to make the low fuel level warning light $(\rightarrow P.~858)$ go off. If there is only a small amount of fuel, the hybrid system may not be able to start. (The minimum amount of fuel to add to make the low fuel level warning light go out is about 2.7 gal. [10.1 L, 2.2 Imp. gal.] when the vehicle is on a level surface. This value may vary when the vehicle is on a slope.)

■ Hybrid battery (traction battery)

The hybrid battery (traction battery) has a limited service life. The lifespan of the hybrid battery (traction battery) can change in accordance with driving style and driving conditions.

A CAUTION

High voltage and high temperature precautions

The vehicle has high voltage DC and AC systems as well as a 12-volt system. DC and AC high voltage is very dangerous and can cause severe burns and electric shock that may result in death or serious injury.

- Never touch, disassemble, remove or replace the high voltage parts, cables and their connectors.
- The hybrid system will become hot after starting as the system uses high voltage.
 Be careful of both the high voltage and the high temperature, and always obey the caution labels attached to the vehicle.



 Never try to open the service plug access hole located under the rear seat. The service plug is used only when the vehicle is serviced and is subject to high voltage.

A CAUTION

■ Road accident cautions

Observe the following precautions to reduce the risk of death or serious injury:

- Pull your vehicle off the road, shift the shift lever to P, apply the parking brake, and turn the hybrid system off.
- Do not touch the high voltage parts, cables and connectors.
- If electric wires are exposed inside or outside your vehicle, an electric shock may occur. Never touch exposed electric wires.
- If a fluid leak occurs, do not touch it as it may be strong alkaline electrolyte from the hybrid battery (traction battery). If it comes into contact with your skin or eyes, wash it off immediately with a large amount of water or, if possible, boric acid solution. Seek immediate medical attention.
- If a fire occurs in the hybrid vehicle, leave the vehicle as soon as possible. Never use a fire extinguisher that is not meant for electric fires. Using even a small amount of water may be dangerous.
- If your vehicle needs to be towed, do so with all front wheels (for 2WD models) or four wheels (for AWD models) raised. If the wheels connected to the electric motor (traction motor) are on the ground when towing, the motor may continue to generate electricity. This may cause an electricity leakage leading to a fire. $(\rightarrow P. 849)$
- Carefully inspect the ground under the vehicle. If you find that liquid has leaked onto the ground, the fuel system may have been damaged. Leave the vehicle as soon as possible.

■ Nickel-metal hydride battery

Your vehicle contains a sealed nickel-metal hydride battery. If disposed of improperly, it is hazardous to the environment and there is a risk of severe burns and electrical shock that may result in death or serious injury.

■ Emergency shut off system

Carefully check to see if there are exposed high voltage parts or cables. Never touch the parts or cables. $(\rightarrow P.38)$

⚠ NOTICE


■ Hybrid battery air vents

- Do not put foreign objects over the air vents. The hybrid battery (traction battery) may overheat or lose power and be damaged.
- Clean the air vents regularly to prevent the hybrid battery (traction battery) from overheating.
- Do not wet or allow foreign substances to enter the air vents as this may cause a short circuit and damage the hybrid battery (traction battery).
- Do not carry large amounts of water such as an aquarium into the vehicle. If water spills onto the hybrid battery (traction battery), the battery may be damaged. Have the vehicle inspected by your Lexus dealer.

1-1. Hybrid system

Energy monitor/consumption screen (RX450h)

You can view the status of your hybrid system on the multi-information display and the navigation system screen or the Lexus Display Audio screen.

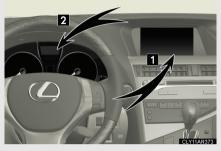

- Navigation system screen or Lexus Display Audio screen (if equipped)
- Multi-information display
- ► Vehicles with a navigation system



Remote Touch*

- 11 "MENU" button
- Remote Touch knob
 - *: For use of the Remote Touch, refer to the "Navigation System Owner's Manual".

► Vehicles with the Lexus Display Audio system




Lexus Display Audio controller $(\rightarrow P.396)$

- Displaying the "Menu" screen (\rightarrow P. 397)
- Turn or move the controller to select a function, number and screen button.

Push the controller to enter the selected function, number and screen button.

Energy monitor

► Navigation system screen (if equipped)

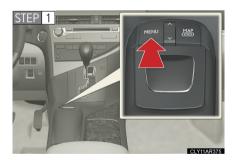


Press the "MENU" button on the Remote Touch.



Select "Info/Apps".

1-1. Hybrid system

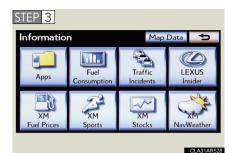

Select "Fuel Consumption".

If the "Trip Information" or "Past Record" screen is displayed, select the "Energy".

► Lexus Display Audio system screen (if equipped)



Press the "MENU" button on the Lexus Display Audio controller.



Select "Car".


If the "Trip Information" or "History" screen is displayed, select the "Energy".


► Multi-information display



Press the " \wedge " or " \vee " switch on the steering wheel through several items to select the energy monitor display.

	Navigation system or Lexus Display Audio system	Multi-information display
When the vehicle is powered by the electric motor (traction motor)	Navigation system Energy Monitor MOTOR Lexus Display Audio system Energy Monitor Energy M	*
When the vehicle is powered by both the gasoline engine and the electric motor (traction motor)	Navigation system Energy Monitor HISTORY Lexus Display Audio system Energy Monitor Fire Information History	
When the vehicle is powered by the gasoline engine	Navigation system Energy Monitor ELEXUS Display Audio system Energy Monitor Energy Monitor	

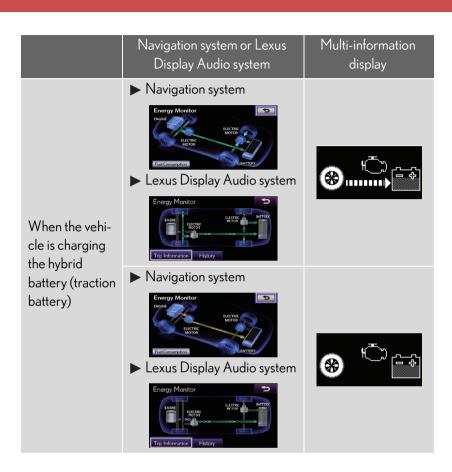

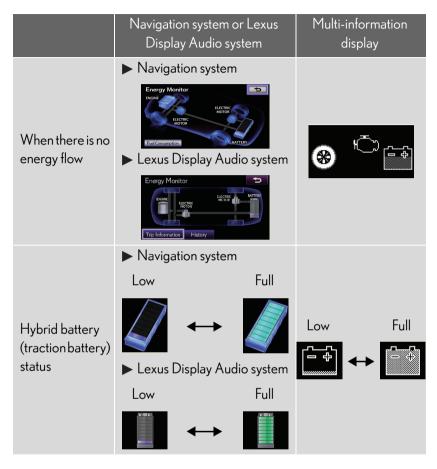


These images are examples only, and may vary slightly from actual conditions.

Consumption

■ Trip information

- ► Vehicles with a navigation system
- Press the "MENU" button on the Remote Touch and select "Info/Apps".
- STEP 2 Select "Fuel Consumption".

If the "Trip Information" screen does not appear, select "Fuel Consumption" on the "Energy Monitor" screen or "Trip Information" on the "Past Record" screen.

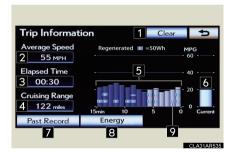


- Reset the trip information data
- 2 Average vehicle speed
- Elapsed time
- 4 Cruising range
- Previous fuel consumption per minute
- 6 Current fuel consumption
- 7 "Past Record" screen appears
- Energy Monitor" screen appears
- Regenerated energy
 - E: One symbol indicates 50 Wh.

The image is example only, and may vary slightly from actual conditions.

1-1. Hybrid system

- ► Vehicles with the Lexus Display Audio system
- STEP 1 Press the "MENU" button on the Lexus Display Audio controller.
- STEP 2 Select "Car" on the "Menu" screen.

If the "Trip information" screen does not appear, select "Trip information".

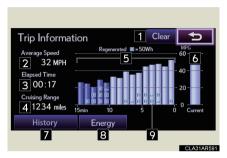


- Reset the trip information data
- 2 Average vehicle speed
- Elapsed time
- 4 Cruising range
- Previous fuel consumption per minute
- 6 Current fuel consumption
- "History" screen appears
- "Energy Monitor" screen appears
- 9 Regenerated energy
 - E: One symbol indicates 50 Wh.

These images are examples only, and may vary slightly from actual conditions.

Past record

- ► Vehicles with a navigation system
- Press the "MENU" button on the Remote Touch and select "Info/Apps".
- STEP 2 Select "Fuel Consumption".

If the "Past Record" screen does not appear, select "Fuel Consumption" on the "Energy Monitor" screen or "Past Record" on the "Trip Information" screen.

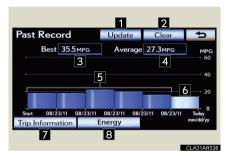


- Update the past record data
- 2 Reset the past record data
- Best past fuel consumption
- 4 Average fuel consumption
 Use the displayed average fuel consumption as a reference.
- 5 Previous fuel economy record
- 6 Current fuel economy
- "Trip Information" screen appears
- *Energy Monitor* screen appears

The image is example only, and may vary slightly from actual conditions.

- ► Vehicles with the Lexus Display Audio system
- STEP 1 Press the "MENU" button on the Lexus Display Audio controller.
- STEP 2 Select "Car" on the "Menu" screen.

If the "History" screen does not appear, select "History".

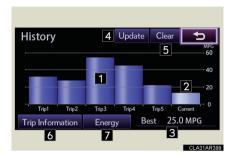

- 1 Previous fuel economy record
- Current fuel economy
- Best past fuel consumption
- 4 Update the past record data
- **5** Reset the past record data
- **6** "Trip information" screen appears
- "Energy Monitor" screen appears

These images are examples only, and may vary slightly from actual conditions.

■ Updating the past record data

Selecting "Update" on the "Past Record" or "History" screen will update the past record data.

Also, the average fuel consumption displayed in the multi-information display will be reset at the same time.

Hybrid vehicle driving tips (RX450h)

For economical and ecological driving, pay attention to the following points:

■ Use of Hybrid System Indicator

More Eco-friendly driving is possible by keeping the indicate of Hybrid System Indicator within Eco area.

When braking the vehicle

Make sure to operate the brakes gently and in good time. A greater amount of electrical energy can be retained when slowing down.

Delays

Repeated acceleration and deceleration, as well as long waits at traffic lights, will lead to bad fuel consumption. Check traffic reports before leaving and avoid delays as much as possible. When encountering a delay, gently release the brake pedal to allow the vehicle to move forward slightly while avoiding overuse of the accelerator pedal. Doing so can help control excessive gasoline consumption.

Highway driving

Control your speed and keep at a constant speed. Also, before stopping at a toll booth or similar, allow plenty of time to release the accelerator and gently apply the brakes. A greater amount of electrical energy can be retained when slowing down.

Air conditioning

Use the air conditioning only when necessary. Doing so can help control excessive gasoline consumption.

In summer: In high temperatures, use the recirculated air mode. Doing so will help to reduce the burden on the air conditioning and reduce fuel consumption as well.

In winter: Because the gasoline engine will not automatically cut out until the gasoline engine and the interior of the vehicle are warm, it will consume fuel. Also, fuel consumption can be improved by avoiding overuse of the heater.

■ Checking tire inflation pressure

Make sure to check the tire inflation pressure frequently. Improper tire inflation pressure can cause poor fuel consumption. Also, as snow tires can cause large amounts of friction, their use on dry roads can lead to poor fuel consumption. Use a tire that is appropriate for the season.

Luggage

Carrying heavy luggage can lead to poor fuel consumption. Avoid carrying unnecessary luggage. Installing a large roof rack can also cause poor fuel consumption.

Warming up before driving

Since the gasoline engine starts up and cuts out automatically when cold, warming up the engine is unnecessary. Moreover, frequently driving short distances will cause the engine to repeatedly warm up, which can lead to poor fuel consumption.